



Place a Call **1**

Admin Settings

Diagnostics

Utilities

Home

Specify camera and video settings, as appropriate for the equipment you are using.

- ▼ General Settings
  - System Settings
  - Home Screen Settings
  - ▶ Security
  - Location
  - Date and Time
  - Serial Port
  - Options
  - ▶ Software Update
- ▶ Network
- Monitors
- 2** **Cameras**
- Audio Settings
- Pairing
- LAN Properties
- ▶ Global Services
- ▶ Tools

**Camera Settings** Update

**\*Any changes made to this setting will cause the system to restart.**

Please enter a name and choose an icon for each video source.

**Camera 1:** 169 Component YPbPr

Name:

Video Quality:

Detect Camera:

Model: Polycom EagleEye III

White Balance:  Restore

**Camera 2:**

Name:

Source:

Video Quality:

Detect Camera:

Source:

Video Quality:

**Camera 4:**

Source:

Video Quality:

Camera:

Backlight Compensation:

Primary Camera:  \*

Camera Pan Direction:

Quality Preference:

Dynamic

People/Content

Bandwidth:

Power Frequency:

Send Content When PC

Connects:

Advanced

**People on Content**

Foreground Source: Camera 1

**Only cameras configured as Content are available as a Background Content Source.**

Background Content Source: Camera 4

Source: Camera 4

**To calibrate:**

It is recommended that you view the HDX system monitor while changing this configuration.

1. Move the camera to the position for presentations. Make sure the green screen fills the view. Stand 3 feet in front of the green screen, in the center of the view. Wait for the camera to focus, and then click **Set Preset**.

Set Preset

2. Step out of the picture, and then click **Begin Calibration**.