
Enabling DMZ on a 2Wire DSL router is relatively easy. Use the following steps.

1. Log into the 2Wire DSL box. By default, from the factory, the 2Wire DSL router has a LAN side address of 192.168.1.254. Please be aware that the use CAN change this address so you may have to contact them for the correct address AND password. Once you connect to the 2Wire box you should see the screen below.




2. To set a system on the LAN side to DMZ you will need to specify which system in the Firewall section. Click on the Firewall icon at the top of the screen. When you do, you will be taken to a screen that should look like below:

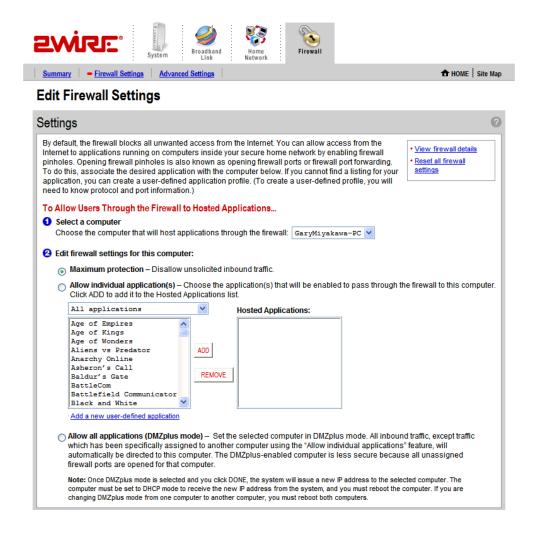

You will need to use the drop down box at "1" to select the correct PC to be set to DMZ. Once you select the correct PC from the list, click on the radio button at the bottom of the screen that says "Allow all applications". Once you click that radio button you will then need to click on the "Done" button at the bottom of the page.

3. You should then see the follow screen.

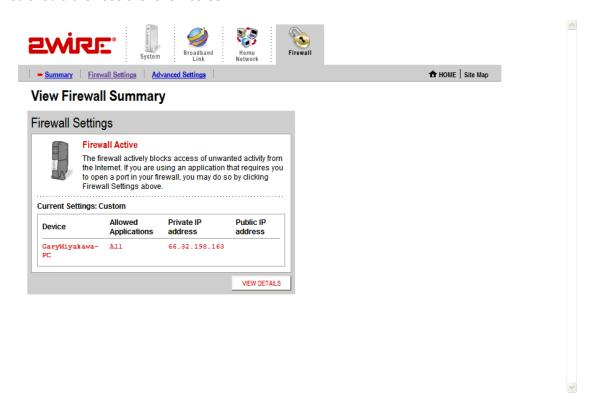

This screen lets you know what system is now configured for DMZ. This "should" be the system you want to run CMA/D on. WARNING: You **MUST** reboot that PC for it to get the full DMZ capability.

I have tested CMA/D using this method and it works fine with the 2Wire DSL Router.